

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型

AUDI A3/S3 MK2 8P 2004-2013  
VOLKSWAGEN GOLF/JETTA/VENTO MK5/MK6 2004-2013 / SCIROCCO MK3 2008-ON / EOS MK1 2006-ON  
VOLKSWAGEN BEETLE A5 2011-ON  
VOLKSWAGEN PASSAT B6/B7 2005-2014 / CC 2008-on  
SKODA OCTAVIA MK2 2004-2012 / YETI MK1 2009-ON  
SKODA SUPERB B6 2008-ON  
SEAT LEON MK2 2005-2012 / ALTEA MK1 2003-ON / TOLEDO MK3 2004-2009


PART NO. 7715

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Front Sway Bar 25.4mm 前防傾桿 1PCS

2. Stabilizer Bush 防傾桿固定橡皮 2PCS

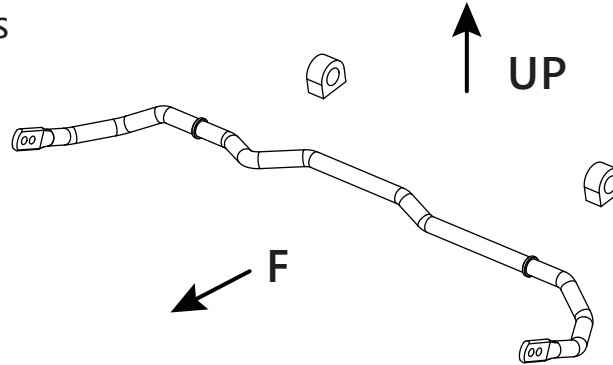

### Installation tips 安裝提示



It is suggested to remove the front sub-frame for easier installation.

建議拆卸前工字樑，更換前防傾桿

Apply the original stabilizer brackets, disassemble the riveted nuts to separate the upper and lower brackets.

需使用原廠固定座，必須將螺帽鉚合部份拆開，即可分解固定座



Torque for bolts

螺絲鎖緊扭力：

M8-60Nm

M10-80Nm

M12-100Nm

M14-160Nm

Screw locking-glue and 4-wheel alignment are required.

並且使用螺絲防鬆膠及電腦四輪定位校正

### Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

