

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


AUDI A3 MK3 8V 2014-present  
VOLKSWAGEN GOLF MK7, A7, Typ 5G 2014-  
SKODA SUPERB 3rd B8 3V 2016-Present

PART NO. 7758

### Contents 內含配件

※ 安裝過程請使用手動工具

1. 28mm 前防傾桿 1PCS

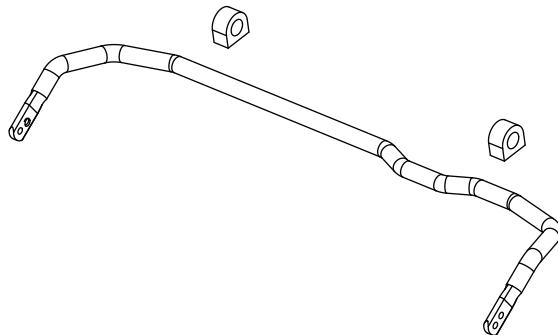

2. 防傾桿固定橡皮 2PCS

### Installation tips 安裝提示

※ HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



建議拆卸工字樑，更換前防傾桿  
必須將原廠防傾桿固定座分解  
螺帽鉸合部分拆開，即可分解固定座

螺絲鎖緊扭力：  
M8-60Nm  
M10-80Nm  
M12-100Nm  
M14-160Nm

建議使用螺絲防鬆膠及電腦四輪定位校正



### Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全。

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊。



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

