

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


AUDI A3 MK2 8P 2004-2013 / TT MK2 8J 2006-2014 / S3 MK2 2006-2012  
VOLKSWAGEN PASSAT B6/B7 2005-2014 / TIGUAN 5N 2009-  
VOLKSWAGEN GOLF R MK5 R32 2005- / MK6 R20 2010-

PART NO.7987

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Front Sway Bar 28mm前防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS

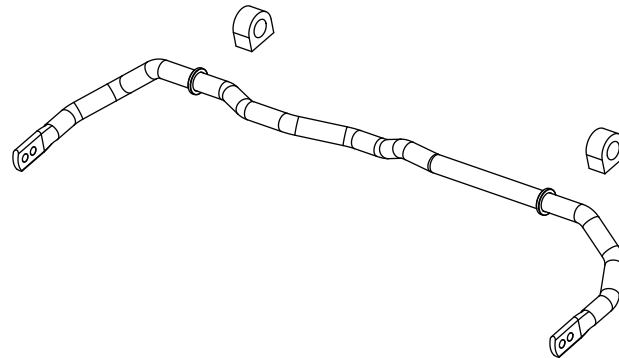

### Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.  
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑

It is suggested to remove the front sub-frame for easier installation. Please notice if there is any interference of piping and wiring to avoid any possible damage. Apply the original stabilizer brackets, disassemble the riveted nuts to separate the upper and lower brackets.

更換前防傾桿，建議拆卸前工字樑以便更換。拆卸時注意油管電線是否干涉，避免拉扯斷裂，必須將原廠防傾桿固定座分解將螺帽鉚合部分拆開，即可分解固定座



Torque for bolts

螺絲鎖緊扭力：

M8-60Nm

M10-80Nm

M12-100Nm

M14-160Nm

Screw locking-glue and 4-wheel alignment are recommended

建議使用螺絲防鬆膠及電腦四輪定位校正



### Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

