

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


MITSUBISHI COLT PLUS 2007-2013

PART NO. 8554

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Front Sway Bar 30mm 前防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS

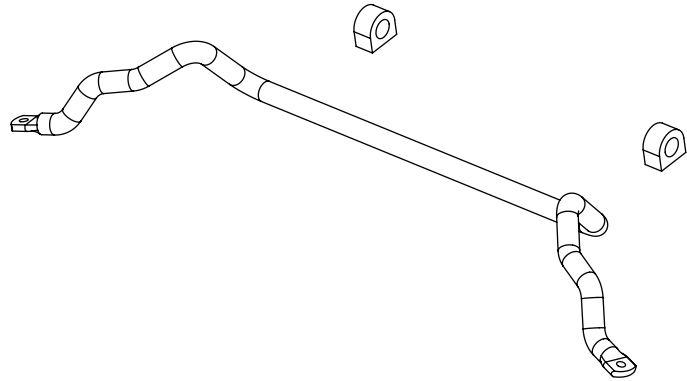

### Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.  
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑

It is suggested to remove the front sub-frame and any components that are attached to the sub-frame, such as steering rack, engine mount, exhaust hanger and piping/wiring brackets...etc.

建議拆卸工字樑及固定在工字樑任何元件，如方向機、引擎腳、排氣管吊耳、油管電線支架，以利更換前防傾桿



Torque for bolts  
螺絲鎖緊扭力：  
M8-60Nm  
M10-80Nm  
M12-100Nm  
M14-160Nm



Screw locking-glue  
建議使用螺絲防鬆膠

### Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027  
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

