

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


NISSAN TIIDA / VERSA 2nd C12 2013-

PART NO. 8562

### Contents 內含配件


※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Rear sway bar 後防傾桿 19mm 1PCS
2. Bracket (RH&LH) 防傾桿固定支架 (R/L) 2PCS
3. Button Head Socket Cap Screw  
半圓頭內六角螺絲M10x1.5x25 4PCS
4. Nylon insert nut 尼龍防鬆螺帽M10x1.5 4PCS
5. Flat washer 平華司M10 4PCS
6. Flanged Screw 凸緣螺絲M10 4PCS
7. Flanged lock-nut 凸緣防鬆螺帽M10 4PCS

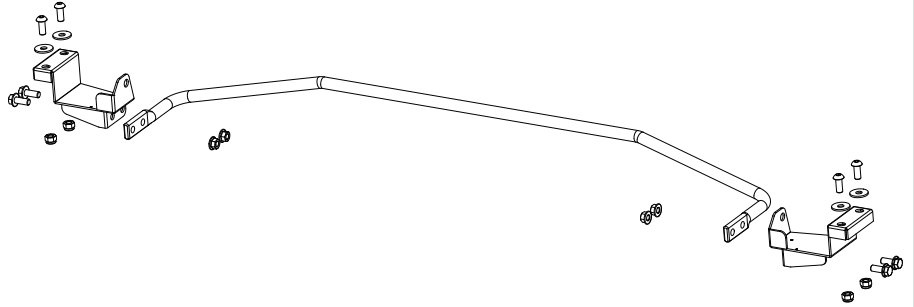

### Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.  
在安裝之前請詳閱 HARDRACE 技術提示

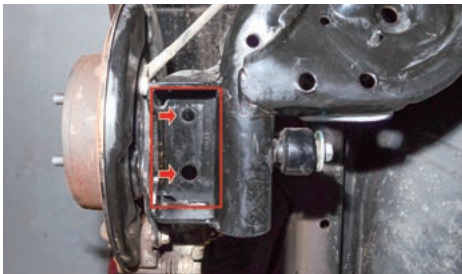


1. The indicated points are where the button head socket cap screws are installed.  
箭頭處為半圓頭內六角螺絲鎖點位置



2. Fix the screws by 6mm hex wrench (Torque=70Nm)  
使用內六角工具 (6mm) 防止空轉 (鎖緊扭力70Nm)



3. Lock the bolt underneath the absorber.  
(Torque=100Nm)  
將避震器下端螺絲鎖上 (鎖緊扭力100Nm)

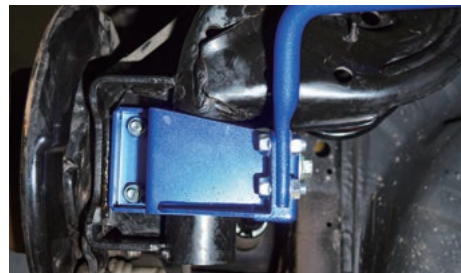

4. Attach the sway bar to the bracket. (Torque=70Nm)  
防傾桿與固定座組合 (鎖緊扭力70Nm)

