

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


AUDI A3 MK2 8P 2004-2013 / TT MK2 8J 2006-2014
AUDI S3 MK2 2006-2012
VOLKSWAGEN PASSAT B6/B7 2005-2014 / TIGUAN 5N 2009-
/ GOLF R MK5 R32 2005- / GOLF R MK6 R20 2010-

PART NO. 7833

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Rear Sway Bar 25.4mm 後防傾桿 1PCS
2. Stabilizer Bush 防傾桿固定橡皮 2PCS

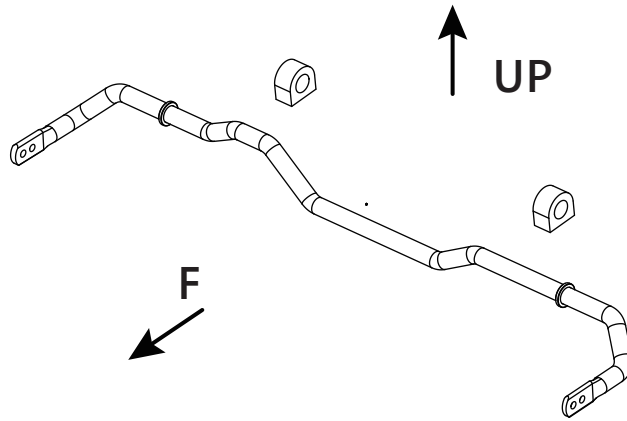

Installation tips 安裝提示

※ Stabilizer bushings are Self-lubrication. Do not apply grease.
HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑



Swap the sway bar directly.
Removal of sub-frame and differential is not required.
可直接更換防傾桿，無須拆卸大樑或差速器



Torque of bolts.
螺絲鎖緊扭力：
M8-60Nm
M10-80Nm

Screw locking gel is recommended.
建議使用螺絲防鬆膠

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

