

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


HONDA odyssey '13 RC1/RC2

PART NO. 7978

Contents 內含配件

※ Please apply hand tools for installation.
安裝過程請使用手動工具

1. Sway Bar 防傾桿 19mm 1PCS
2. Bracket 托盤支架 (R/L) 2PCS
3. Button socket cap screw 內六角半圓頭螺絲 (M10x1.5x25) 6PCS
4. Washer 華司、墊片 (10M) 6PCS
5. Spring Washer 彈簧華司 (10M) 6PCS
6. Nylon nut 尼龍螺帽 (M10x1.5-17x10) 6PCS
7. Flanged nut 凸緣螺帽 (M10x1.25-14x9) 4PCS

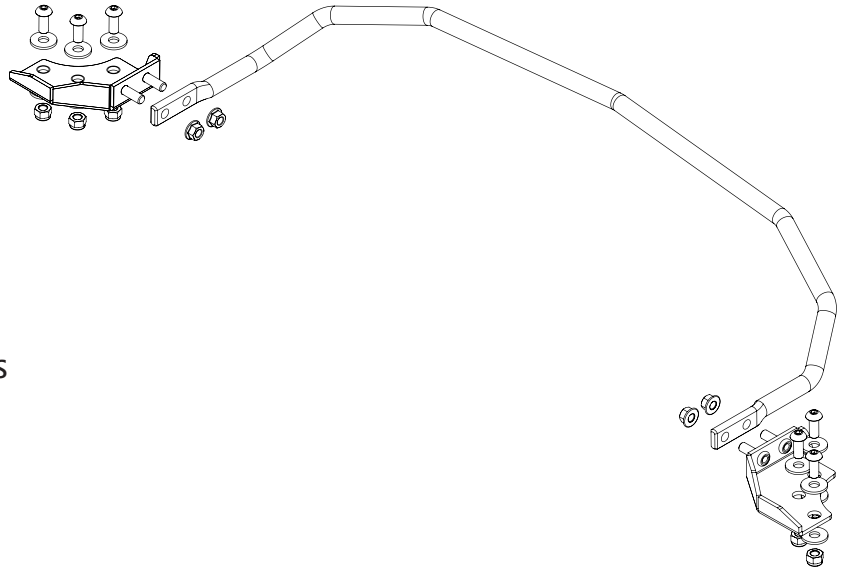

Installation tips 安裝方法



STEP 1

Place the screws with washers, and then insert screws into the holes of spring seat.
把內六角螺絲加入華司墊片，放入彈簧下座孔洞中

STEP 2

The screws and washers have to be placed flat and properly on the spring seats.
內六角螺絲與墊片必須平整放置在彈簧下座上面

STEP 3

Fix LH and RH brackets by nylon nuts and spring washers.
Torque of nut is 80Nm
使用尼龍螺帽及彈簧華司固定托盤支架 (左/右皆為此步驟)
螺帽扭力值為80Nm

STEP 3

Sway bar has to be placed upon exhaust pipe, fix the sway bar using flanged nuts.
Torque of nut is 80Nm
防傾桿安裝須穿過排氣管上部，使用凸緣螺帽鎖上
螺帽鎖緊扭力值為80Nm

