

# Installation Guide

## 安裝說明書

VEHICLE APPLICATIONS  
適用車型


MAZDA CX-3

PART NO. 8577

### Contents 內含配件

※ Please apply hand tools for installation  
安裝過程請使用手動工具

1. Rear Sway Bar 後防傾桿 1PCS
2. Bracket 托盤支架 (R/L) 2PCS
3. Hex Socket Button Cap Screw 內六角半圓頭螺絲 6PCS
4. Hex Bolt 外六角螺絲 4PCS
5. Nylon Insert Lock Nuts 尼龍螺帽 6PCS
6. Flange Nut 凸緣螺帽 4PCS
7. Spring Washer 彈簧華司 2PCS
8. Washer (Wide) 華司墊片(寬) 10PCS
9. Washer (Narrow) 華司(窄) 2PCS

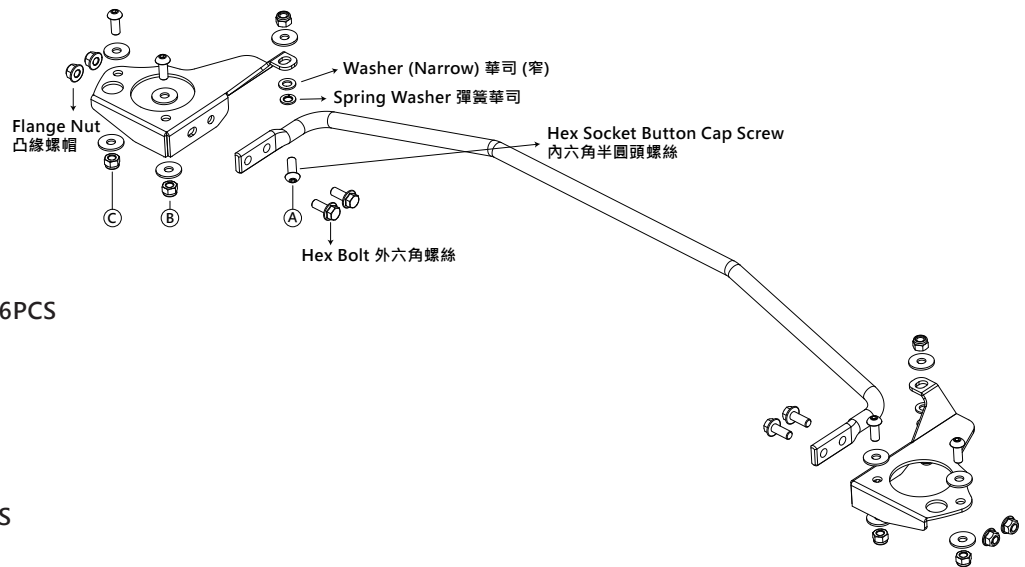

### Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.  
在安裝之前請詳閱 HARDRACE 技術提示

1. 安裝托盤支架(R/L)於螺絲對應位置。A鎖點:螺絲由下往上對鎖。B/C鎖點:螺絲由上往下對鎖。如下圖  
Install RH/LH brackets at the relative positions of bolts.  
Lock point (A): Bolt direction should be from bottom to top.  
Lock point (B)/C: Bolt direction should be from top to bottom.  
Please refer to below figures.



Torque of bolt 鎖緊扭力: 70Nm

安裝完成圖  
Figure of completion

