Installation Guide

安裝說明

VEHICLE APPLICATIONS **適用車型**

HONDA CR-V 2nd RD4/5/7


PART NO. 8607

Contents 內含配件

X Please apply hand tools for installation 安裝過程請使用手動工具

- 1. Rear Sway Bar 22mm 後防傾桿 1PCS
- 2. Stabilizer Bush 防傾桿固定橡皮 2PCS



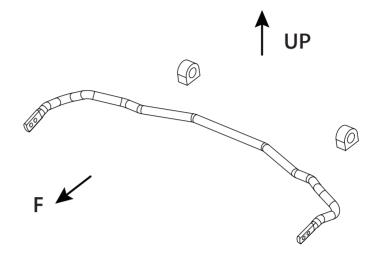

Installation tips 安裝提示

X Please read the HARDRACE Tech Tips before installing the products. 在安裝之前請詳閱 HARDRACE 技術提示



Stiffness adjustable



Figure of installation 安裝示意圖



Recommended Torque for bolts/nuts 螺絲/帽鎖緊扭力參考

Mi8	60Nm
M10	80Nm

HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下,車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢察在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝,以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands. 當更換您車輛的懸吊套件時,請記下您的線組與管線安裝位置,非原廠相同的安裝位置可能會造成元件之損壞,造成車輛的危險。請參考原廠車輛手冊







