

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


VOLKSWAGEN TIGUAN 2nd 2016-present
SKODA SUPERB 3rd B8 3V 2016-Present

PART NO. 8781

Contents 內含配件

※ 安裝過程請使用手動工具

1. 前防傾桿 1PCS
2. 防傾桿固定橡皮 2PCS

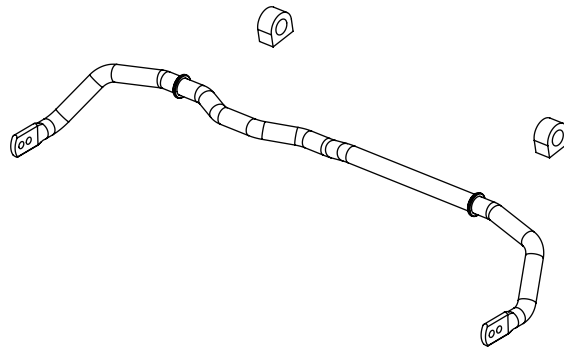

Installation tips 安裝提示

※ HARDRACE 防傾桿專用橡皮已加入自潤功能，無須添加潤滑劑

更換防傾桿需拆卸前工字樑，以便施工更換
安裝防傾桿前，必須將原廠防傾桿固定座拆解，方法如下



1. 固定座螺帽部分已鉚合住，需分解



2. 建議使用13~14mm鑽頭將鉚合處分開（注意：螺帽螺牙誤傷到）



3. 分解完成如上圖



螺絲鎖緊扭力：

M8-60Nm

M10-80Nm

M12-100Nm

M14-160Nm

建議使用螺絲防鬆膠

安裝完成後，需進行電腦四輪定位校正

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

