

# Installation Guide

## 安裝說明書


VEHICLE APPLICATIONS  
適用車型

TOYOTA XL30 10-ON


PART NO. 8795

### Contents 內含配件

1. Rear sway bar 後防傾桿 19mm 1PCS
2. Bracket 防傾桿固定支架(R/L) 2PCS
3. M10 Hex socket cap screw  
M10 內六角螺絲 45mm 2PCS
4. M10 Hex socket cap screw  
M10 內六角螺絲 30mm 4PCS
5. M10 Nylon nut  
M10 尼龍螺帽 6PCS
6. Washer 華司 4PCS

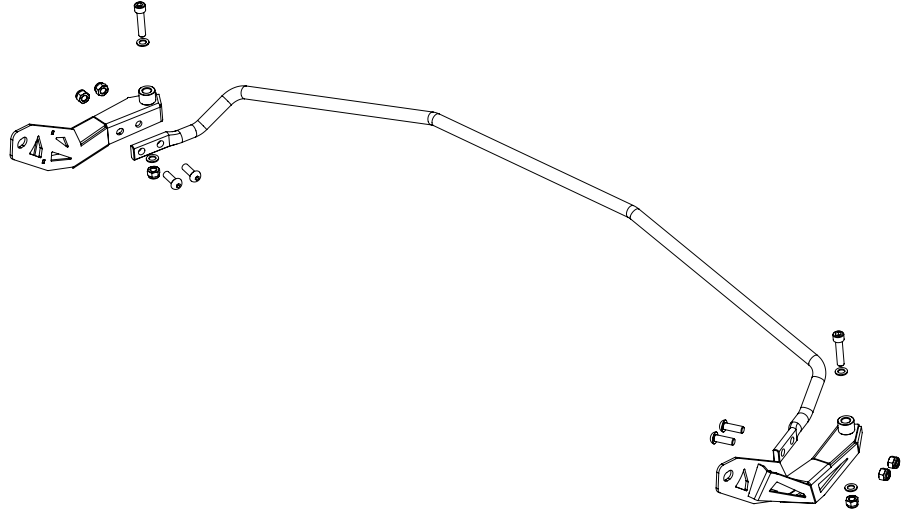

### Installation tips 安裝方法

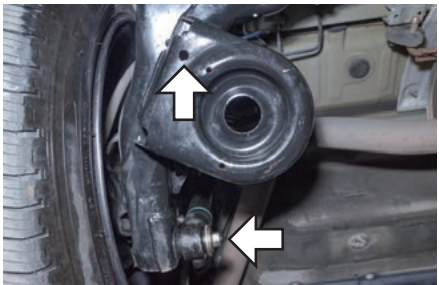

The upper arrow indicates the location of 45mm M10 hex socket cap screw. The lower arrow indicates the fix point of the brackets: At the lower end of absorber.

上方箭頭位置為 ( M10 內六角螺絲 45mm ) 放置位置

下方箭頭位置為固定支架後方固定位置，鎖至避震器下端



Figure of installation (LH/RH).  
左 / 右安裝示意圖



Sway bar is installed upon exhaust system.  
防傾桿安裝須繞過排氣管上方