

Installation Instructions

安裝說明書


FRONT STRUT BRACE
引擎室拉桿
#8909

Application 適用車型

BMW 1-Series F20/F21 '11-present

Components 內含配件

① Strut brace 引擎室拉桿總成	1PC
Bolt 螺絲 (M10x1.5x80)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

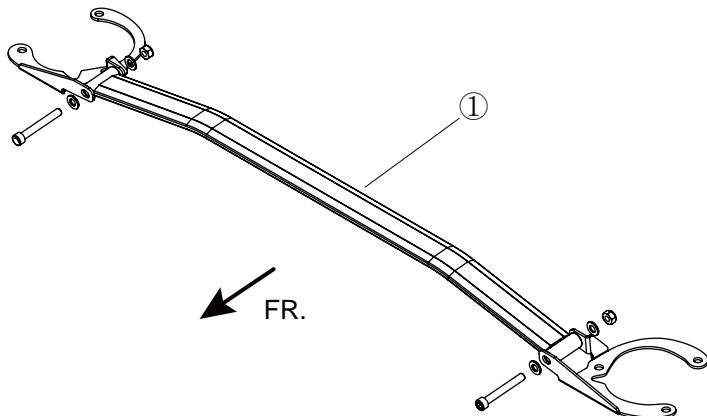

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. With the vehicle on a level surface, remove the cowl panel to get access to the strut tower.

將車輛停放在平地上，拆卸雨刷蓋板找到下方的避震上座螺絲。



2. Remove the bolts of strut mounts on both sides and position ① Strut brace over the mounts.

拆卸兩側避震塔螺絲，接著將 ①引擎室拉桿 放置於避震器上座並鎖回上座螺帽。

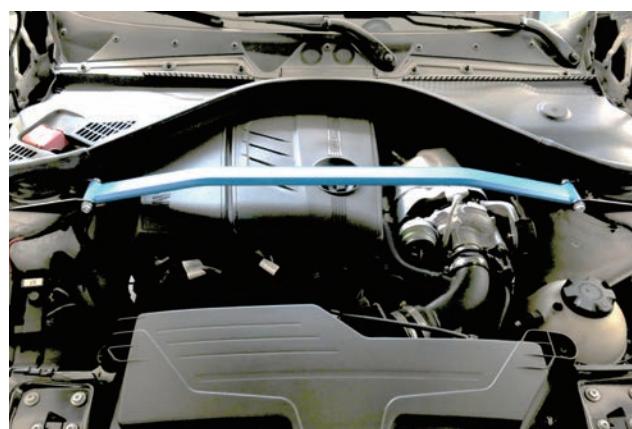


Illustration of installed state
完成示意圖