

# Installation Instructions 安裝說明書


FRONT STRUT BRACE  
引擎室拉桿  
#8910

## Application 適用車型

Mini Cooper R55/R56 '06-13

## Components 內含配件

① Strut Brace 引擎室拉桿總成 1PCS

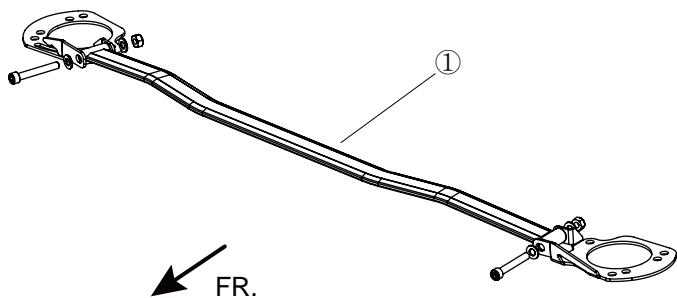

## Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行，以確保安全。
- 安裝前請記下線路安裝路徑及位置，請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. With the vehicle on a level surface, remove the 6 nuts of strut mounts on both sides.  
將車輛停放在平地上，接著拆卸兩側避震器上座共6個螺帽。



2. Position ①Strut Brace over the strut mounts and tighten all the nuts.  
將 ①引擎室拉桿 裝上避震器上座，並鎖回避震器上座螺帽。



3. Illustration of installed state.  
完成示意圖