


Application 適用車型

Ford Fiesta MK7 '13-

Components 內含配件

① Strut Brace 引擎室拉桿總成 1PCS

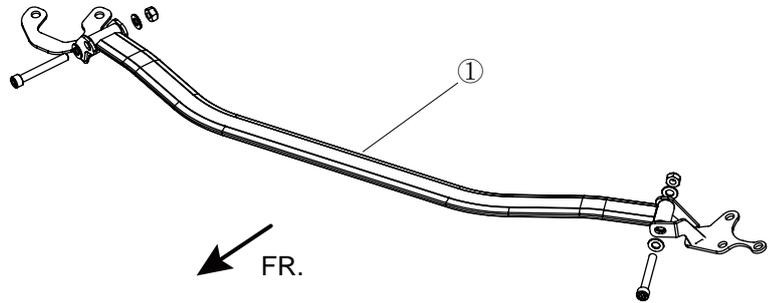

Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行，以確保安全。
- 安裝前請記下線路安裝路徑及位置，請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. With the vehicle on a level surface, remove wiper arms and cowl panels. 將車輛停放在平地，接著拆卸雨刷臂及雨刷蓋板。
2. Remove the bracket of brake fluid reservoir on driver side strut mount and move it aside. 拆卸位於駕駛座側的煞車油壺支架並移至一旁。
3. Remove the forward and innermost nuts of strut mounts on both sides. 拆卸兩側避震器上座朝前及朝內的螺帽。



4. Position ① Strut brace over the mounts and tighten the nuts back. 將 ① 引擎室拉桿放置在避震器上座並鎖回上座螺帽。
5. Install the brake fluid reservoir back to the driver side strut mount. 將煞車油壺裝回駕駛座側避震器上座。
6. Install cowl panel and wiper arms. (Illustration of installed state) 裝回雨刷蓋板及雨刷臂。(完成示意圖)

