


Application 適用車型

Subaru WRX (VA) '13-present
Subaru Levorg (VM) '14-present

Components 內含配件

① Sub-frame support bar 副車架拉桿	1PCS
Bolt 螺絲 (M12x1.25x70)	2PCS
Nut 螺帽 (M12x1.25-19x13.5)	2PCS

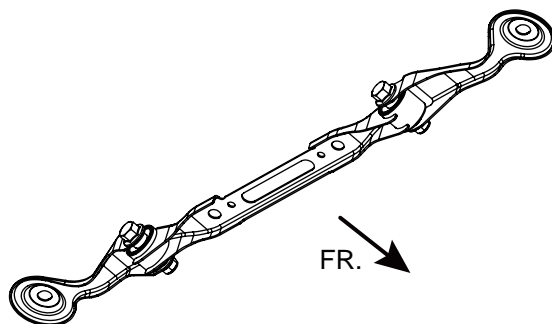

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to access the rear sub-frame.
將車輛升起後找到後副車架。
2. Remove the two rear-most bolts of the sub-frame and the two bolts of the body panel. (See arrows in figure 1&2)
拆卸副車架最後端以及和車體鈹件上的各兩個螺絲。
(請參考圖表一、二箭頭位置)
3. Place ① Sub-frame support bar on the sub-frame and body panel.
將 ① 引擎室拉桿 放置於副車架及車體鈹件上。
4. Once in place, reinstall the removed bolts and nuts to secure the bar.
拉桿固定完成後，裝回已拆下的螺絲及螺帽，將拉桿固定於車身及副車架。

