

Installation Instructions 安裝說明書


FRONT STRUT BRACE
引擎室拉桿
#8947

Application 適用車型

Toyota Sienta XP170 '15-

Components 內含配件

① Strut Brace 引擎室拉桿總成	1PCS
② Bolt 螺絲	4PCS
③ Nut 螺帽	4PCS

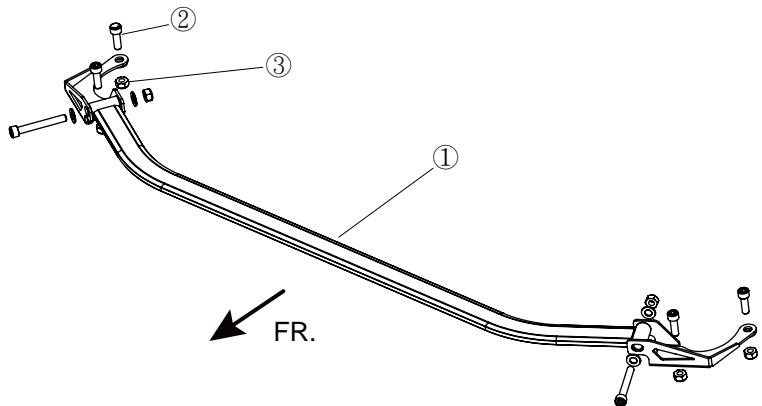


Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行，以確保安全。
- 安裝前請記下線路安裝路徑及位置，請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明


1. Jack up the front end and remove front wheels, then find the strut mounts under the cowl panel and the forward and outer holes around the mounts on both sides.

將車輛前軸架起後並拆卸前輪，找出藏在雨刷蓋板下方的避震器上座以及上座周圍朝前及朝外的洞前方及內側上座螺帽共4顆(畫圈處)。

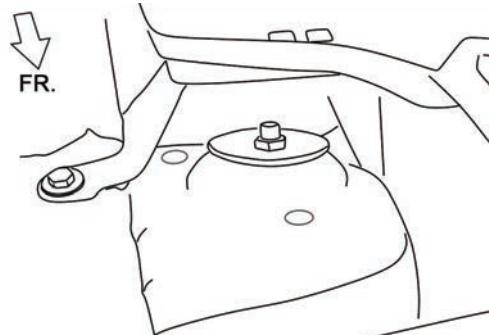

2. Position ① Strut Brace over the mounts and place ② Bolts into the holes.

將 ① 引擎室拉桿總成 放置在避震器上座，並使用附上的配件 ② 螺絲置入孔中。

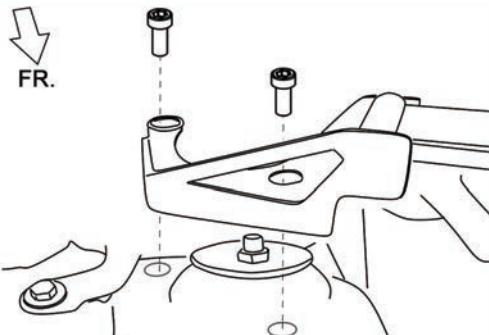

3. Tighten the bolts from inside of wheel arches using ③ Nuts (Circled), and install the wheels back.

使用配件 ③ 螺帽 從輪拱內鎖上螺絲(畫圈處)，並將前輪裝回。

