#8966

Installation Insructions


安裝說明書

Application 適用車型

Honda CR-V '17-

Components 內含配件

① Strut Brace 引擎室拉桿總成 1PCS

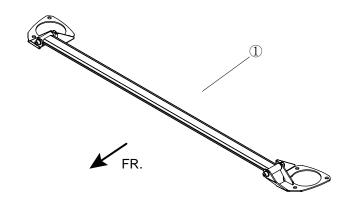

Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts frimly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行,以確保安全。
- 安裝前請記下線路安裝路徑及位置,請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲,或依照說明中標註的扭力上鎖。

Instructions 安裝說明

- 1. Make sure all wheels are on the groud when performing installation first, then remove the 6 nuts from the strut mounts on both sides. 確認車輛處於四輪著地狀態,接著拆卸兩側避震器 上座螺帽共6顆。
- 2. Position ①Strut Brace over the strut mounts and tighten all the nuts.
 - 將 ①引擎室拉桿 裝上避震器上座,並鎖回避震器 上座螺帽。
- 3. Illstration of installed state. 完成示意圖

