

# Installation Instructions

## 安裝說明書


FRONT SWAY BAR  
強化前防傾桿  
#8993

### Application 適用車型

Mazda 323 BJ '98-04  
Mazda Premacy CP '99-05  
Ford Tierra '98-06

### Components 內含配件

- |                               |      |
|-------------------------------|------|
| ① F. sway bar 前強化防傾桿 ( 22mm ) | 1PCS |
| ② Sway bar bushing 強化防傾桿橡皮    | 2PCS |

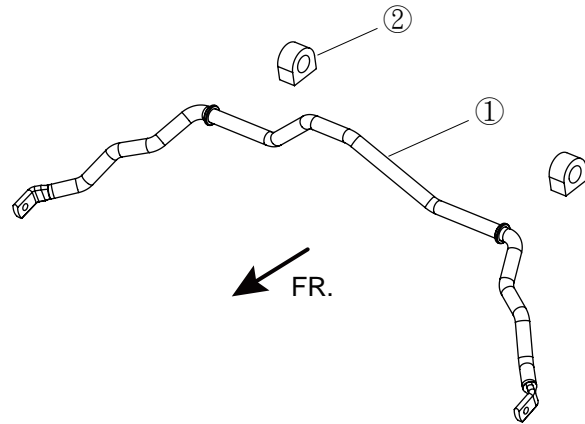

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Jack up the vehicle, detach the rear engine mount, steering rack, sway bar end-links and exhaust from the sub-frame.  
車輛升起後將固定於副車架上的後引擎腳、方向機、李仔串及排氣管卸下。
2. Drop the front sub-frame to get access to the sway bar. Remove the factory sway bar mount brackets, bushings and sway bar.  
降下副車架後鬆開原廠的防傾桿固定環，即可將原廠防傾桿含固定橡皮拆下。
3. Install ①Front sway bar and place ②Sway bar bushings, then tighten the sway bar to the sub-frame using the original bolts and mount brackets.  
安裝 ①強化防傾桿及 ②防傾桿橡皮，並沿用原廠固定環將防傾桿鎖上副車架。
4. Bolt the sub-frame to the vehicle, and then reinstall the steering rack, engine mount, exhaust and sway bar end-links.  
Please have the vehicle professionally aligned after installation.  
最後將副車架以及方向機、引擎腳、和尚頭以及李仔串鎖回原位，並於安裝完成後接受電腦四輪定位校正。

#### Note 提示

- Screw locking glue are recommended.  
建議使用螺絲防鬆膠。
- Torque specification 上鎖扭力值  
M8-60Nm  
M10-80Nm  
M12-100Nm

