

Installation Instructions

安裝說明書

FRONT RADIATOR BRACE

水箱架拉桿


#Q0004

Application 適用車型

Toyota Sienta '16-present

Components 內含配件

① Radiator brace 水箱架拉桿	1PCS
② Flange bolt 凸緣螺絲 (M6x1.0x20)	2PCS
③ Flange nut 凸緣螺帽 (M6x1.0 -10x6)	2PCS

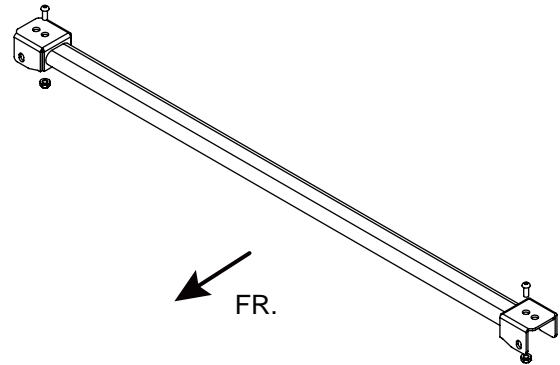

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts from the radiator support on both sides.
(See arrows in figure1)
拆卸兩側水箱架上的螺絲。(請參考圖表一箭頭位置)
2. Place ①Radiator brace on the radiator support.
將 ① 水箱架拉桿 放置於水箱架上。
3. Reinstall the removed bolts, then install supplied ②Flange bolts to the inner holes of the brace and tighten with ③Flange nuts from the bottom to secure the brace.
(See arrows in figure 2)
裝回已拆下的螺絲，接著使用配件 ② 凸緣螺絲 置入桿身內側鎖孔並使用 ③ 凸緣螺帽 從下方鎖緊，使水箱架拉桿固定於兩側避震塔。(請參考圖表二箭頭位置)
4. Illustration of installed state
完成示意圖

