

Installation Instructions

安裝說明書

FRONT SUB-FRAME BRACE

前樑拉桿


#Q0005

Application 適用車型

Toyota Sienta '16-present

Components 內含配件

- | | |
|---------------------------------|------|
| ① Sub-frame brace RH 水箱架拉桿-右 | 1PCS |
| ② Sub-frame brace LH 水箱架拉桿-左 | 1PCS |
| ③ Flange bolt 凸緣螺絲 (M8x1.25x25) | 4PCS |

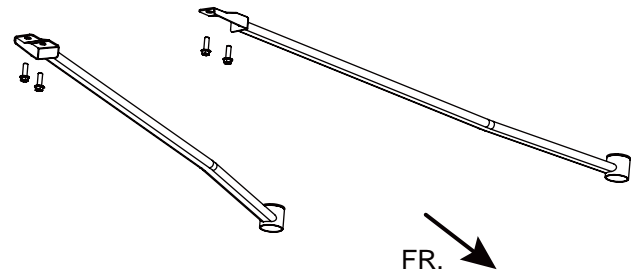

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts from the front sub-frame on both sides.
(See arrows in figure1)
拆卸前副車架兩側的螺絲。(請參考圖表一箭頭位置)
2. Place ①&② Sub-frame braces on the vehicle. (See figure 1)
將 ① 及 ② 副車架拉桿置於前副車架及車身上。(請參考圖表一)
3. Once in place, reinstall the removed bolts to the front sub-frame.
拉桿固定完成後，即可裝回已拆下的副車架螺絲。
4. Install supplied ② Flange bolts to the other ends to secure the braces. (See arrows in figure 2)
使用配件 ② 凸緣螺絲鎖入桿身另一端孔中，使拉桿固定於車底及副車架。(請參考圖表二箭頭位置)

