


### Application 適用車型

Mazda CX-3 '15-Present

### Components 內含配件

① Brace-Lateral 拉桿-橫	1PCS
② Brace-RH 拉桿-右側	1PCS
③ Brace-LH 拉桿-左側	1PCS
④ Bracket 支架	2PCS
⑤ Bolt 螺絲 (M10x1.25x25)	2PCS
⑥ Washer 華司 (26x10.5x2)	2PCS
⑦ Nut 螺帽 (M10x1.25-14x9.5)	1PCS

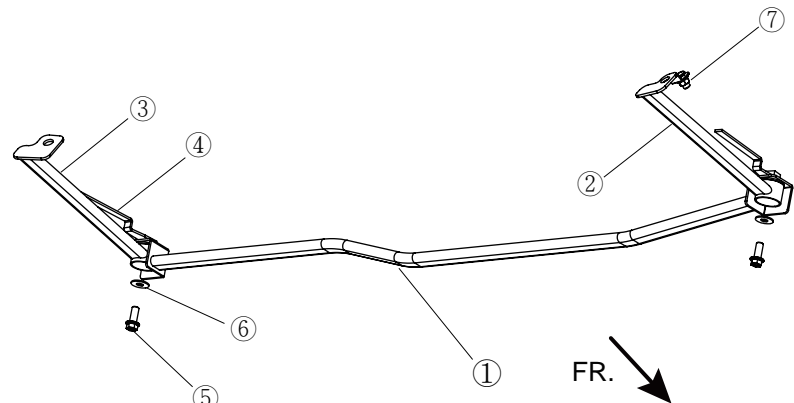

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Assemble ② Brace-RH and ③ Brace-LH to ① Brace-Lateral using supplied ⑤ Bolts and ⑥ Washers. (See components figure)  
使用配件 ⑤ 螺絲 和 ⑥ 華司 組裝拉桿①、② 及③ (請參考配件圖)
2. Install both ends of brace onto the frame. Then install the right hand side brake line bracket on to the brace using supplied ⑦ Nut.  
將拉桿總成的兩側尾端裝入車台上，右側請使用配件 ⑦ 螺帽 將剎車線支架固定於拉桿上。
3. Place ④ Brackets into the holes on both sides. Then tighten ⑤ Bolts into ④ Brackets.  
將配件 ④ 支架 置入兩側孔中，使用 ⑤ 螺絲 鎖上。

Illustration of installed state.  
完成示意圖。

