

Installation Instructions

安裝說明書

REAR SWAY BAR - 17MM

後防傾桿 - 17MM


#Q0115

Application 適用車型

Subaru Impreza '17-present GK/GT

Components 內含配件

- | | |
|----------------------------|------|
| ① Sway bar 防傾桿桿身 | 1PCS |
| ② Stabilizer bushing 防傾桿橡皮 | 2PCS |

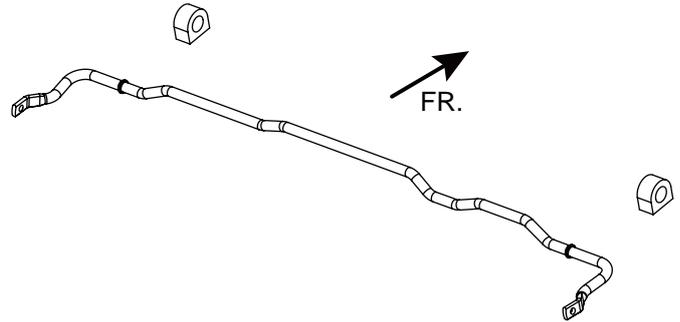

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Support the rear sub-frame with a jack stand, then remove the bolts and drop the sub-frame to access the rear stabilizer.
(See figure 1&2)
使用千斤頂支撐於後副車架。拆卸副車架螺絲並將副車架卸下即可找到防傾桿。
(請參考圖表一、二)

2. Position the brackets to the rear lower spring mounts on both sides.
(See figure 1)
將防傾桿支架置入兩側後彈簧下座。(請參考圖表一)

Note 提示

- Remove the exhaust pipe, disconnect headlight leveling sensor plug and ABS wires before dropping the sub-frame.
卸下副車架前請先拆下排氣管中段、大燈水平感應插頭以及ABS感應線。

3. Replace the factory stabilizer bar and bushings with supplied ① stabilizer bar and ② stabilizer bushings, then install the bar and bushings to the vehicle using the factory bushing clamps.
(See figure 3)
將原廠防傾桿的桿身以及橡皮替換為 ①防傾桿桿身 及 ②防傾桿橡皮。並沿用原廠的固定環安裝於車輛。(請參考圖表三)

Reinstall the sub-frame, exhaust pipe and wires to the vehicle after installation.

安裝完成後將副車架、排氣管中段及線組裝回車輛。

