

Installation Instructions

安裝說明書


REAR SUB-FRAME BRACE
後樑拉桿
#Q0121

Application 適用車型

Toyota Prius (XW50) '15-Present

Components 內含配件

① R. sub-frame brace 後樑拉桿 1PCS

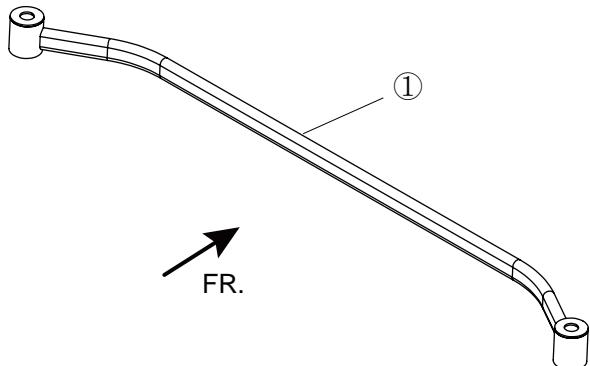

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to get access to the rear sub-frame.
將車輛升起後找到後副車架。



2. Remove the rear bolts securing the sub-frame on both sides.
卸下副車架後方的兩個固定螺絲。



3. Position ①Rear sub-frame brace as shown in figure X, then bolt on using the original bolts.
依照圖表放置 ①後樑拉桿，並沿用原螺絲將拉桿鎖上。

Illustration of installed state
完成示意圖