

Installation Instructions

安裝說明書


FRONT LOWER BRACE
前下結構桿
#Q0138

Application 適用車型

Subaru Levorg '14-present (VM)

Components 內含配件

① FR. lower brace-Mid 前下結構桿-中	1PCS
② FR. lower brace-RH 前下結構桿-右	1PCS
③ FR. lower brace-LH 前下結構桿-左	1PCS
④ Bolt 螺絲 (M8x1.25x16)	2PCS
⑤ Nut 螺帽 (M8x1.25-12x6.5)	2PCS

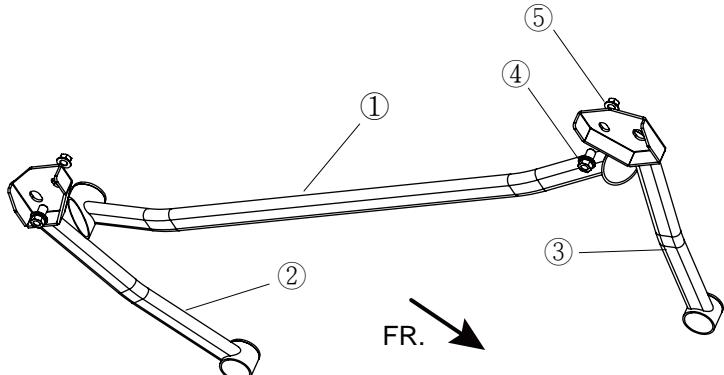

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to remove the two bolts securing front sub-frame on both sides, then attach ②Lower brace-RH and ③Lower brace-RH to the vehicle and reinstall the bolts. (See figure 1)
將車輛升起後拆卸前副車架兩側的螺絲，並將 ②前下結構桿-右 及 ③前下結構桿-右 組裝上車輛，並沿用原螺絲鎖上。(請參照圖表一)



2. Install supplied ④Bolts to the holes of the braces from the top and then tighten with supplied ⑤Nuts from the bottom on both sides. (See figure 2)
於兩側分別將配件 ④ 螺絲 從上方置入結構桿的鎖孔中，並使用 ⑤螺帽 從下方將螺絲鎖緊。 (請參照圖表二)



3. Remove the two bolts of the front sub-frame and position ①FR. lower brace-Mid to the vehicle. Once in place, reinstall the bolts to the sub-frame.(See figure 3)
卸下副車架的兩個螺絲後組裝 ①前下結構桿-右，並將原螺絲鎖回副車架上。(請參照圖表三)

