


# Installation Instructions 安裝說明書

FRONT SWAY BAR - 25.4MM  
前防傾桿 - 25.4MM  
#Q0147

## Application 適用車型

Subaru Impreza '17-present GK/GT

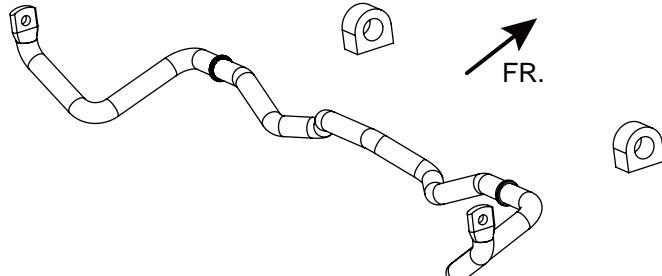

## Components 內含配件

- ① Stabilizer bar 防傾桿桿身
- ② Stabilizer bushing 防傾桿橡皮

1PCS  
2PCS

## Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

## Instructions 安裝說明

1. Unbolt the front stabilizer bushing clamp and end links on both sides to remove the stabilizer bar. (See figure 1)  
拆卸前防傾桿固定環螺絲及李仔串螺帽後即可卸下防傾桿桿身。  
(請參考圖表一)
2. Assemble supplied ②Stabilizer bushings and the factory bushing clamps to ① Stabilizer bar  
使用配件 ②防傾桿橡皮 以及原廠的橡皮固定環組裝上 ①防傾桿桿身。
3. Position ①Stabilizer bar to the vehicle, then reinstall the removed bushing clamp bolts and end links nuts.  
安裝 ①防傾桿桿身 並將已拆下的固定環螺絲及李仔串螺帽鎖上。

### Tip 提示

Support and raise the engine a bit for more clearance to install the stabilizer bar.  
(See figure 2)  
建議將引擎頂高一些，使防傾桿桿身能從較大的縫隙穿入安裝。  
(請參考圖表二)



Illustration of installed state  
完成示意圖