

Installation Instructions

安裝說明書


FRONT STRUT BRACE
引擎室拉桿
#Q0162

Application 適用車型

Mitsubishi Eclipse Cross '18-present

Components 內含配件

① Strut brace 引擎室拉桿	1PCS
Bolt 螺絲 (M10x1.5x80)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

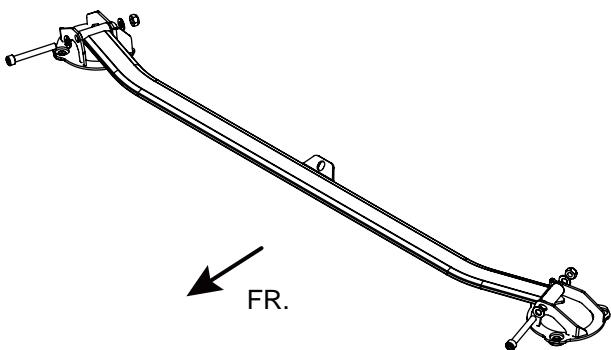

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the nuts from the strut towers on both sides and the bolt in the middle.
(See arrows in figure1&2)

拆卸兩側避震器上座的螺帽以及位於正中央的螺絲。(請參考圖表一、二)



2. Place ①Strut brace on the strut towers.
將 ①引擎室拉桿 放置於避震塔上。



3. Once in place, reinstall the removed bolts and nuts to secure the brace.
拉桿固定完成後，裝回已拆下的螺絲及螺帽，將引擎室拉桿固定於兩側避震塔及正中央的鎖點。



4. Illustration of installed state
完成示意圖