

Installation Instructions

安裝說明書

REAR SUBFRAME BRACE

後樑兩點拉桿


#Q0217

Application 適用車型

Subaru Impreza '17-present

Components 內含配件

① Brace RH 拉桿-右	1pcs
Brace LH 拉桿-左	1pcs
② Nut plate 螺帽鎖片	2pcs
③ Flange bolt 凸緣螺絲 (M10x1.25x20)	2pcs
④ Washer 華司 (20.8x10.7x2)	2pcs

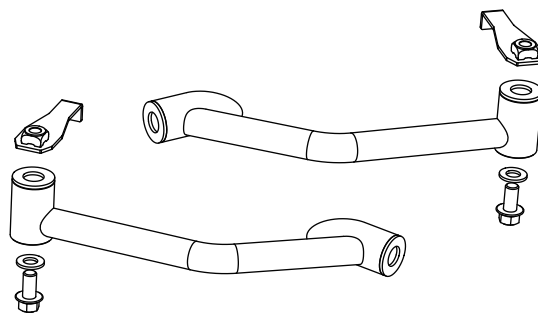

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove rear lower rear control arm bolts to position the braces, then reinstall the control arm bolts.

(See figure 1R & figure 2)

將後下後控制臂的螺絲卸下，並安裝 拉桿，完成後將控制臂螺絲鎖回。(參考圖表一右、圖表二)

2. Insert supplied nut plates to the rear lower front (toe) control arm mounts. Align the nuts to the second holes, then Install supplied bolts and washers to secure the braces.

(See figure 1L & figure2)

將配件螺帽鎖片置入後下前(束角)控制臂座，並使螺帽對準下方的第二個孔，再使用配件螺絲及華司由下方鎖上，以固定拉桿。

(參考圖表一左、圖表二)

Illustration of installed state

安裝完成示意圖

