


Application 適用車型

Volvo XC60 '18-present

Components 內含配件

① Brace 結構桿桿身 1PCS

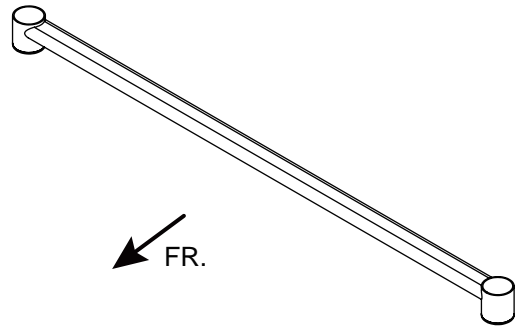

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts from the rear sub-frame on both sides.
(See arrows in figure 1)
拆卸後副車架兩側的螺絲。(請參考圖表一箭頭)
2. Position ①Brace to the vehicle.
將 ①結構桿桿身 組裝於車輛。
3. Once in place, reinstall the removed factory bolts to secure the brace.
沿用已拆下的原廠螺絲安裝至鎖孔以固定桿身。

Illustration of installed state.
安裝完成示意圖

