

Installation Instructions

安裝說明書


REAR ADD-ON SWAY BAR-17MM
後加裝型防傾桿-17MM
#Q0255

Application 適用車型

Suzuki Vitara/Escudo 2WD/4WD '15-present

Components 內含配件

| | |
|-----------------------------------|------|
| ① Sway bar 防傾桿桿身 | 1PCS |
| ② Bracket-RH 支架-右 | 1PCS |
| ③ Bracket-LH 支架-左 | 1PCS |
| ④ Allen bolt 內六角螺絲 (M10x1.5x25) | 4PCS |
| ⑤ Nut 螺帽 (M10x1.5-17x10) | 4PCS |
| ⑥ Flange nut 凸緣螺帽 (M10x1.25-14x9) | 4PCS |
| ⑦ Washer 華司 (20.8x10.7x2) | 8PCS |

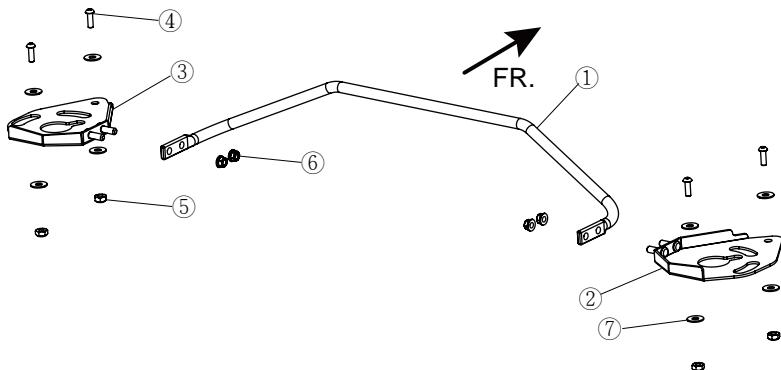

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Assemble ②Bracket-RH and ③Bracket-LH to both ends of ① Sway bar using supplied ⑥ Flange nuts.

(See components figure)

首先組裝防傾桿，使用配件⑥凸緣螺帽將②支架-右及③支架-左鎖上①防傾桿桿身兩端的鎖孔。(請參考配件圖)

2. Position the brackets to the rear lower spring mounts on both sides.

(See figure 1)

將防傾桿支架置入兩側後彈簧下座。(請參考圖表一)

Note 提示

- Remove the circled part from the differential support of 4WD models.

4WD車型須將後差速器支架上畫圈處的配重塊移除。



3. Install supplied ④Allen bolts & ⑦Washers (4pcs) to the spring mounts from the top on both sides. (See figure 2)

將配件④內六角螺絲和⑦華司(4pcs)由上方置入彈簧下座。(請參考圖表二)



4. Tighten the bolts using supplied ⑤Nuts & ⑦Washers (4pcs) from the bottom to secure the sway bar.

使用⑤螺帽和⑦華司(4pcs)從支架下方對鎖，使防傾桿固定於彈簧下座。

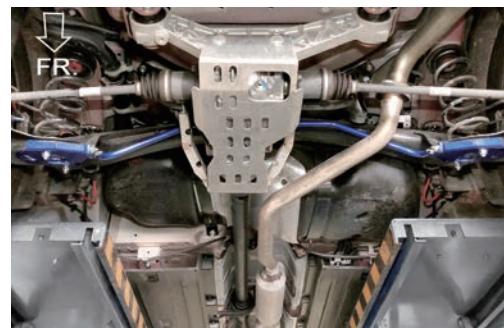


Illustration of installed state 安裝完成示意圖