

Installation Instructions

安裝說明書


REAR ADD-ON SWAY BAR
後加裝型防傾桿 - 17MM
#Q0258

Application 適用車型

Suzuki Baleno '15-present

Components 內含配件

① Stabilizer bar 防傾桿桿身	1pcs
② Bracket-RH 支架-右	1pcs
③ Bracket-LH 支架-左	1pcs
④ Bolt 螺絲 (M10x1.5x35)	2pcs
⑤ Bolt 螺絲 (M10x1.25x25)	4pcs
⑥ Nut 螺帽 (M10x1.5-17x10)	2pcs
⑦ Nut 螺帽 (M10x1.25-14x9)	4pcs
⑧ Washer 華司 (20.8x10.7x2)	4pcs

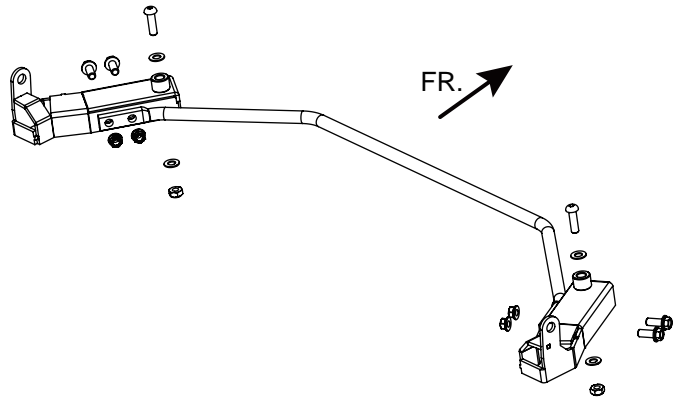

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全。否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置。或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲。或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove rear shock absorber bolts to install supplied 2. Bracket-RH & 3. Bracket-LH.

將後減震筒螺絲卸下後安裝 2. 支架-右 及 3. 支架-左。

Note 提示

Support rear axle using a jack stand to avoid springs from popping out.

拆卸螺絲前請使用千斤頂撐住後軸。以防止彈簧彈出。

2. Once in place, reinstall shock absorber bolts and then install supplied 4. Bolts, 6. Nuts and 8. Washers to spring seats to secure the brackets

將後減震筒螺絲卸下後安裝 2. 支架-右 及 3. 支架-左。鎖回減震筒螺絲並於彈簧座處安裝配件 4. 螺絲、6. 螺帽 及 8. 華司。

3. Install 1. Stabilizer bar to the brackets on both sides using supplied 5. Bolts and 7. Nuts.

使用配件 5. 螺絲 及 7. 螺帽 將 1.防傾桿桿身 安裝於兩側支架上。

Note 提示

- Torque specification 上鎖扭力值
M10X1.5: 80Nm
M10X1.25: 80Nm
Shock absorber 減震筒: 100Nm

Illustration of installed state
安裝完成示意圖

