

Installation Instructions

安裝說明書

FRONT SWAY BAR
前防傾桿, 28mm
#Q0298

Application 適用車型

VOLVO XC90 '15-
VOLVO XC60 '17-
VOLVO S90/V90 '16-
VOLVO S60/V60 '18-

Components 內含配件

- ① Sway bar 防傾桿桿身.....1pcs
- ② Bushing 橡皮.....2pcs
- ③ Bracket-upper 橡皮固定環-上.....2pcs
- ④ Bracket-lower 橡皮固定環-下.....2pcs

Caution 注意事項



- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Disconnect front coilovers from the control arms
將前避震器從三角架拆下。
2. Disconnect steering rack, rear engine mount and exhaust hanger from front subframe.
將方向機、後引擎腳以及排氣管吊耳從前副車架拆下。
3. Use a transmission jack to drop the rear of subframe until there's enough space to access the sway bar.
使用變速箱千斤頂，將副車架後端卸下，直到有足夠的空間能拆裝防傾桿即可。
4. Uubolt the OE sway bar brackets and end links to remove the OE bar.
卸下原廠防傾桿固定環及李子串螺絲後即可將原廠防傾桿取下。
5. Assemble supplied sway bar bushings and brackets to the new sway bar.
將附件橡皮及固定環安裝於新的防傾桿桿身。
6. Install the new sway bar to the subframe and end links.
將新的防傾桿安裝至副車架並鎖上李子串。
7. Reinstall front subframe and all the disconnected parts.
裝回副車架，並將先前斷開的部分復原。

Note 提示

- ※ Please have the vehicle aligned after installation.
安裝完成後請接受電腦四輪定位校正。

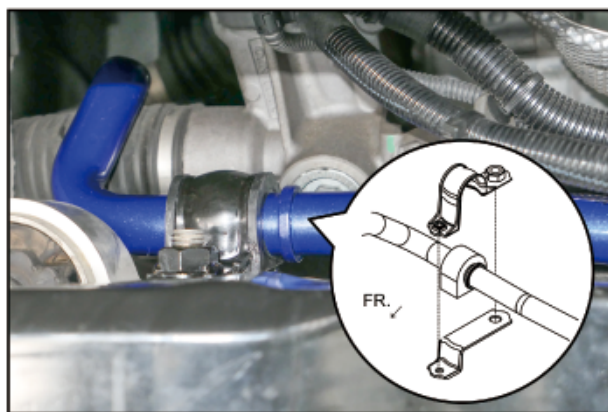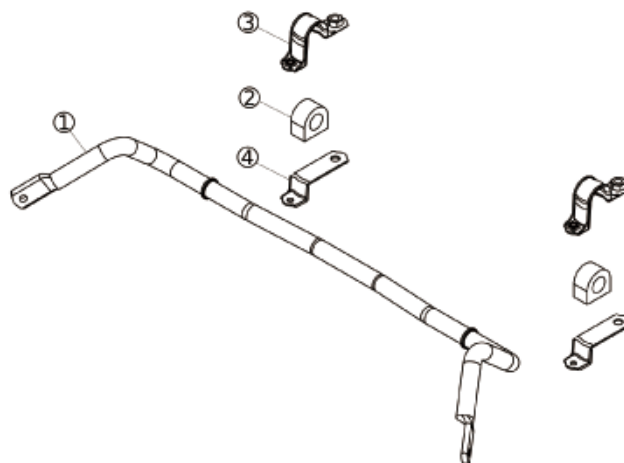

▲ Illustration of installed state 安裝完成示意圖