

Installation Instructions

安裝說明書


REAR ADD-ON SWAY BAR
後加裝型防傾桿 - 17MM
#Q0338

Application 適用車型

Suzuki Swift Sport ZC33S '17-present

Components 內含配件

① Stabilizer bar 中央桿身	1pcs
② Upper bracket-RH 上端支架-右	1pcs
③ Upper bracket-LH 上端支架-左	1pcs
④ Lower bracket-RH 下端支架-右	1pcs
⑤ Lower bracket-LH 下端支架-左	1pcs
⑥ Nut 螺帽 (M12x1.25-19x12)	4pcs
⑦ Nut 螺帽 (M10x1.25-14x9)	6pcs
⑧ Washer 華司 (24x13x2.6)	4pcs
⑨ Washer 華司 (20.8x10.7x2)	2pcs

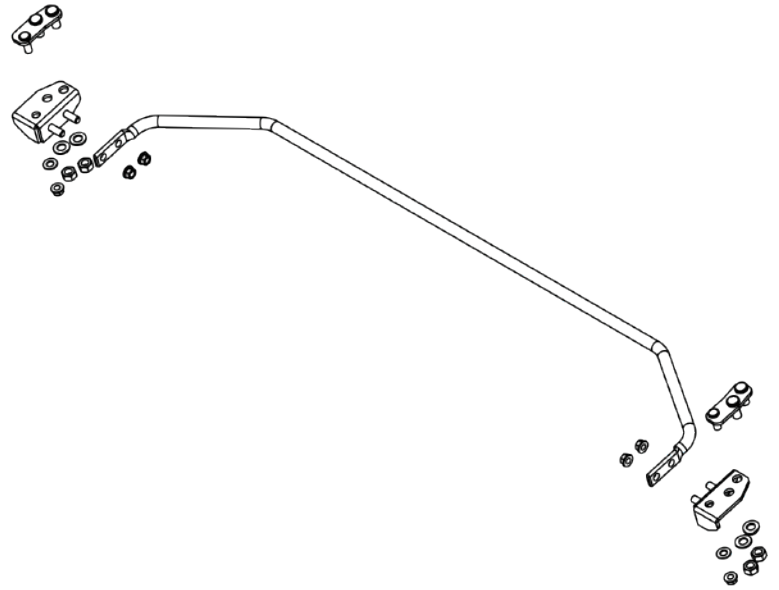

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove rear shock absorber lower bolts to insert supplied upper brackets, then reinstall the shock absorbers. (See figure 1)
將後減震筒螺絲卸下後安裝左/右上支架。完成後將減震筒裝回。
(參考圖表一)

Note 提示

Support rear axle with a jack stand to avoid springs from popping out.
拆卸螺絲前請使用千斤頂撐住後軸，以防止彈簧彈出。

2. Assemble supplied lower brackets to both ends of stabilizer bar using supplied M10 nuts. (See figure 2)
使用配件 M10 螺帽。先將左/右下支架組裝至防傾桿桿身兩側。
(參考圖表二)
3. Install lower brackets to upper bracket studs using supplied M10 & M12 nuts and washers. (See figure 2)
使用配件 M10 及 M12 螺帽及華司，將左/右下支架固定於左/右上支架的螺柱。(參考圖表二)

Torque Specification 上鎖扭力值

M10X1.5: 80Nm

M10X1.25: 80Nm

Shock absorber 減震筒: 100Nm

Illustration of installed state
安裝完成示意圖

