

# Installation Instructions

## 安裝說明書

FR. LOWER 4-POINT BRACE

前下結構桿


#Q0387

### Application 適用車型

Honda CR-V '12-16

### Components 內含配件

- ① Brace-RH 結構桿-右..... 1pcs
- ② Brace-center 結構桿-中間..... 1pcs
- ③ Brace-LH 結構桿-左..... 1pcs

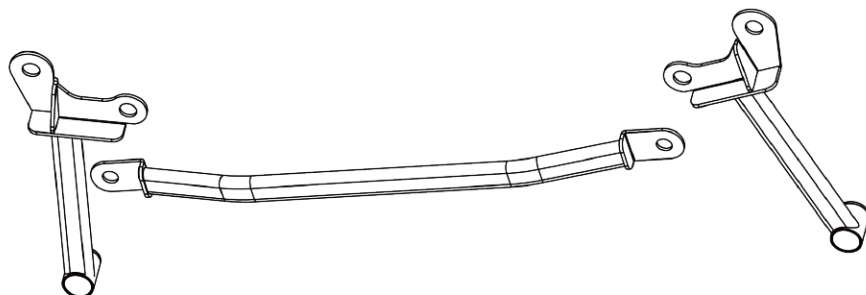

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.  
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.  
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.  
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

### Instructions 安裝說明

1. Remove the factory splash guard.  
將原廠下護板卸下。



2. Remove the subframe and frame rail bolts on both sides.  
(See figure 1&2)  
拆卸兩側副車架及底盤大樑的螺絲。  
(參考圖表一及圖表二)

3. Position the center brace on the vehicle.  
安裝中間結構桿。
4. Position the RH brace and LH brace on the vehicle.  
安裝左側及右側結構桿。
5. Reinstall the bolts to secure the brace.  
鎖回螺絲以將桿身固定。
6. Reinstall the splash guard.  
將原廠下護板裝回車輛。



▼ Illustration of installed state  
安裝完成示意圖

Torque Specification 上鎖扭力值

M8 : 60Nm    M12 : 100Nm  
M10 : 80Nm    M14 : 160Nm