

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#Q0396

Application 適用車型

Toyota Corolla '18- (E210)

Components 內含配件

- | | | |
|---|-------------------------|------|
| ① | Brace 結構桿 | 1pcs |
| ② | Cross bar 中間桿 | 1pcs |
| ③ | Bracket-RH 支架-右 | 1pcs |
| ④ | Bracket-LH 支架-左 | 1pcs |
| ⑤ | Bolt 螺絲 (M10x1.5x75) | 2pcs |
| ⑥ | Nut 螺帽 (M10x1.5-17x10) | 2pcs |
| ⑦ | Washer 華司 (20.8x10.7x2) | 4pcs |
| ⑧ | Bolt 螺絲 (M6x1.0x20) | 4pcs |
| ⑨ | Washer 華司 (25.4x10.3x3) | 6pcs |

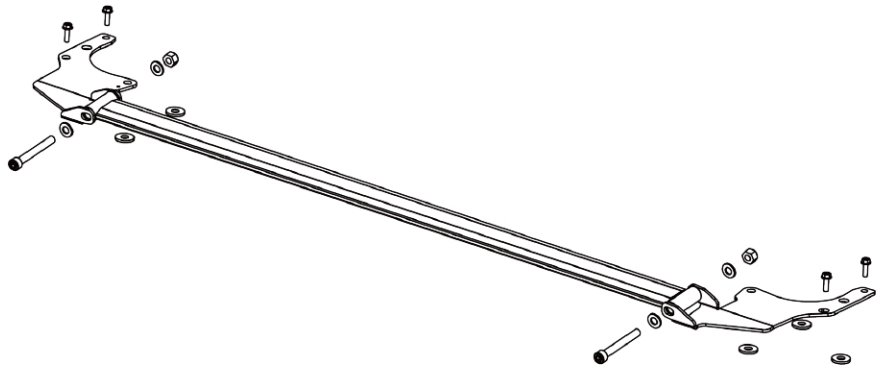

Caution 注意事項



- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove wiper arms, cowl panel wiper linkages and inner brackets to access strut towers.
卸下兩刷臂、兩刷蓋板、兩刷連桿及內側鉸金件後可找到避震器上座。



2. Place supplied washers over the studs on strut towers.
(See figure 1)
將配件華司置於避震塔螺絲上。(參考圖一)
3. Place brackets on the strut towers, then reinstall the outer-most nuts. (See figure 2)
將結構桿支架置於避震塔上，並先安裝最外側的避震器螺帽。(參考圖二)

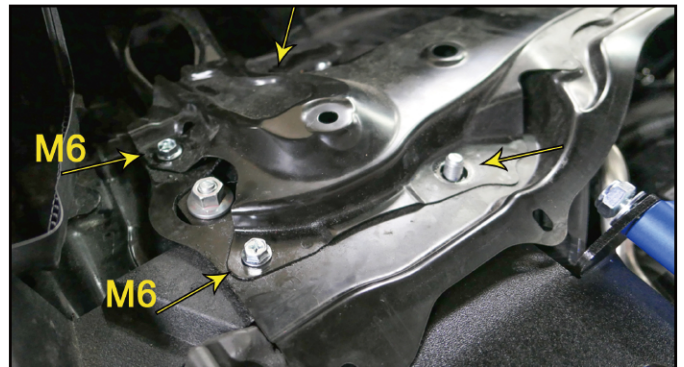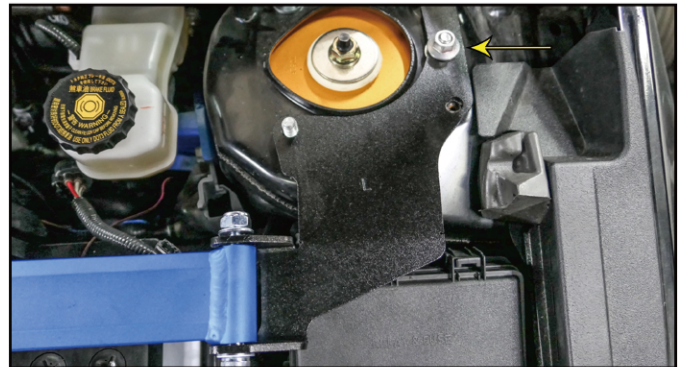

4. Reinstall the cowl panel inner bracket using supplied M6 bolts and factory strut bolts. (See figure 3)
使用配件M6螺絲及原廠避震器螺帽，將兩刷蓋板內側鉸金件鎖回車輛。(參考圖三)
5. Reinstall wiper linkages, cowl panel and wiper arms.
將兩刷連桿、兩刷蓋板及兩刷臂裝回車上。



▼ Illustration of installed state 安裝完成示意圖