

Installation Instructions

安裝說明書

FRONT LOWER BRACE

前下拉桿

#Q0413

Application 適用車型

LEXUS IS XE30

Components 內含配件



① Brace 結構桿桿身.....1pcs

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Raise and safely support the vehicle.
將車輛升起。
2. Remove the factory triangular subframe brace.
將原廠副車架三點結構補強鉸件拆下。
3. Remove the front lower arm rear bushing outer bolts.
拆卸前下三角架後端鐵套的外側螺絲。
4. Remove the bolts behind lower arm bushings on frame rails.
拆卸前下三角架後鐵套後端的大樑螺絲。
5. Install the brace to the subframe.
將結構桿桿身安裝至副車架。
6. Reinstall the bolts to secure the brace.
鎖上螺絲以固定桿身。
7. Reinstall the factory subframe brace.
完成後將原廠結構鉸件裝回車輛。

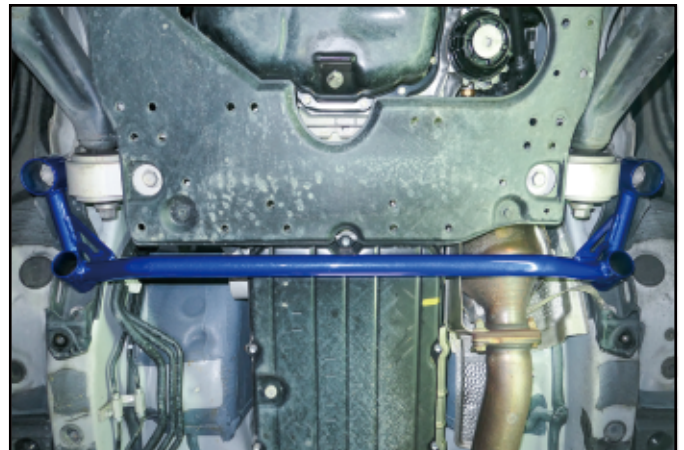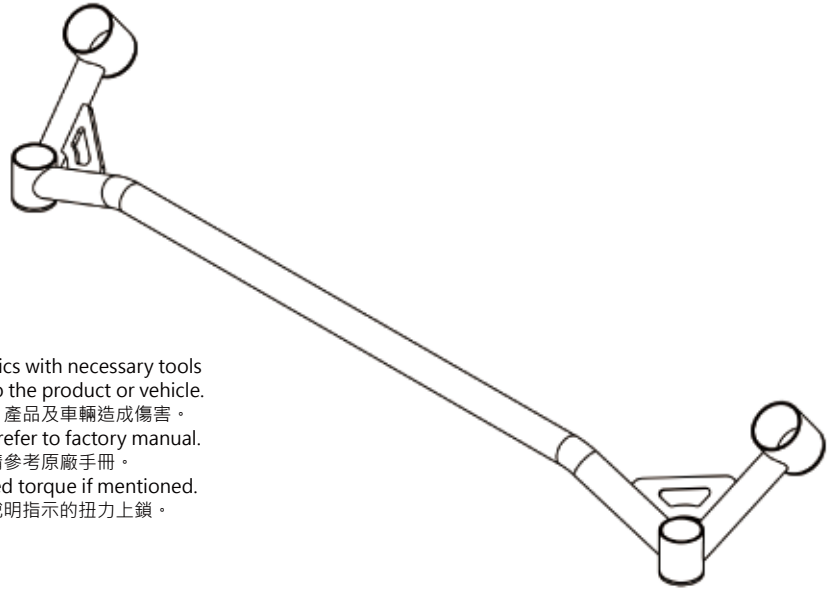

See figure 1 (參考圖表一)



See figure 2 (參考圖表二)



Illustration of installed state 安裝完成示意圖