

# Installation Instructions

## 安裝說明書

REAR TORSION BEAM BRACE

後扭力樑拉桿

#Q0427


### Application 適用車型

SKODA FABIA '14 - (NJ)

AUDI A1 '10-18 (8X)

### Components 內含配件

- ① Brace 結構桿
  - Cross bar 中間桿..... 1pcs
  - Bracket-RH 支架-右..... 1pcs
  - Bracket-LH 支架-左..... 1pcs
  - Bolt 螺絲 (M10x1.5x70)..... 2pcs
  - Nut 螺帽 (M10x1.5-17x10)..... 2pcs
  - Washer 華司 (20.8x10.7x2)..... 4pcs
- ② Washer 華司 (24x13x3)..... 2pcs

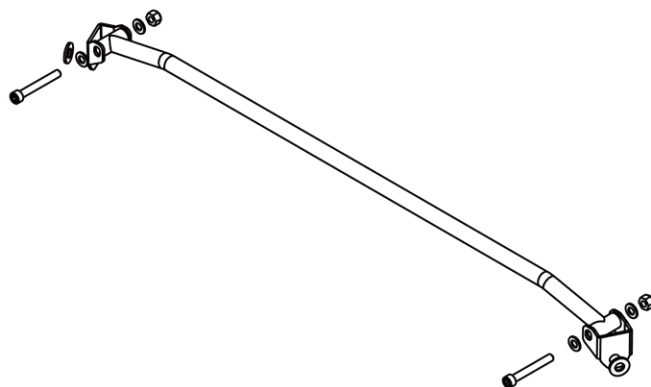

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

### Instructions 安裝說明

1. Raise and safely support the vehicle.  
將車輛升起。
2. Remove the rear torsion beam mounting nuts.  
拆卸後扭力樑固定螺帽。
3. Install supplied brackets and M12 washers to the torsion beam mounting  
將配件結構桿支架及M12華司安裝至扭力樑固定座。
4. Reinstall the torsion beam mounting nuts.  
將扭力樑固定螺帽鎖上。
5. Install cross bar using supplied M10 bolts, nuts and washers.  
使用配件M10螺絲、螺帽及華司安裝中間桿。

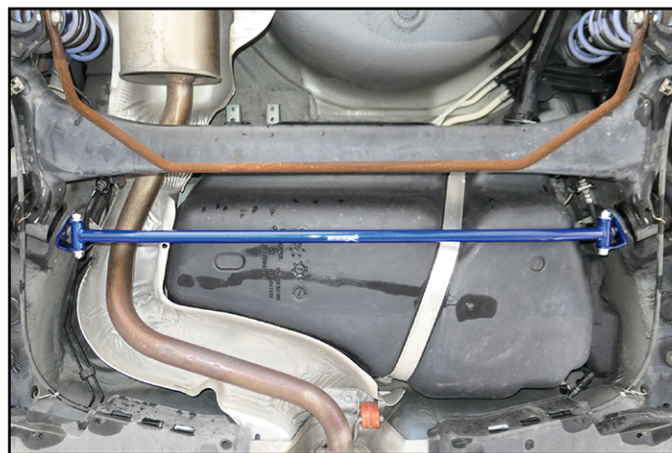


Illustration of installed state  
安裝完成示意圖

