

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿

#Q0500

Application 適用車型


TOYOTA PRIUS ALPHA / PRIUS V ZVW40

Components 內含配件

① Brace 結構桿

Cross bar 中間桿1pcs
Bracket-RH 支架-右.....1pcs
Bracket-LH 支架-左1pcs
Bolt 螺絲 (M10x1.5x80).....2pcs
Nut 螺帽 (M10x1.5-17x10)2pcs
Washer 華司 (20.8x10.7x2).....4pcs

② Nut 螺帽 (M10x1.25-14x9.5)4pcs

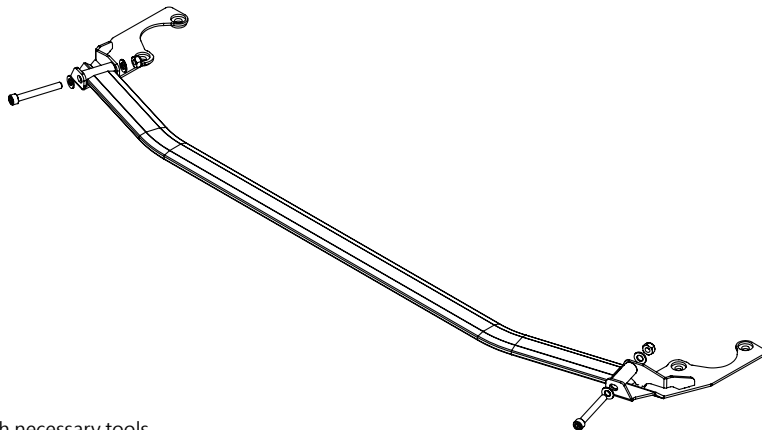

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove wiper arms, cowl panel, wiper motors and cowl inner bracket to access strut towers.

將雨刷臂、雨刷蓋板、雨刷馬達及內側支架後找到避震塔。

2. Remove the strut tower nuts on both sides.

將兩側避震塔上的螺帽拆下。

3. Place supplied brackets onto the strut towers.

將結構桿支架安裝於避震塔上。

4. Install supplied M10x1.25 strut tower nuts to secure the brackets.

將附件M10x1.25避震塔螺帽鎖上以固定支架。

5. Install the cross bar using supplied bolts, nuts and washers.

使用附件螺絲、螺帽及華司安裝中間桿。

6. Reinstall cowl inner bracket, wiper motors, cowl panel and wiper arms.

將內側支架、雨刷馬達、雨刷蓋板及雨刷臂裝回。

