


Components 內含配件

- ① Center bar 中間桿1pcs
- ② Bracket-RH 支架-左1pcs
- ③ Bracket-LH 支架-右.....1pcs
- ④ Bolt 螺絲 (M6x1.0x16).....2pcs
- ⑤ Bolt 螺絲 (M10x1.5-75).....2pcs
- ⑥ Nut 螺帽 (M8x1.25-12x7.5).....2pcs
- ⑦ Nut 螺帽 (M10x1.5-17x10).....2pcs
- ⑧ Washer 華司 (20.8x10.7x2).....2pcs
- ⑨ Washer 華司 (26x8.4x2).....2pcs
- ⑩ Spacer 墊片 (30x8.5x8)Q0721 only / 僅限Q0721.....2pcs

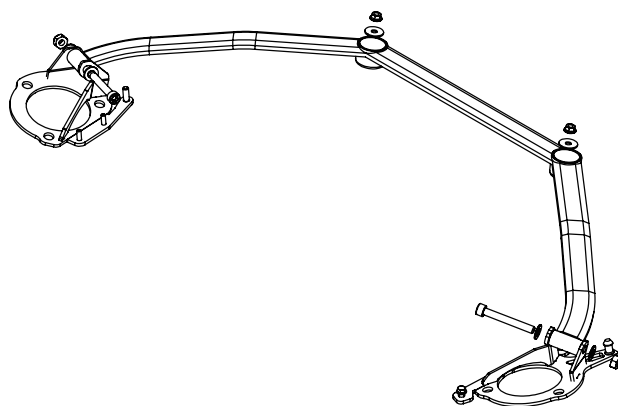

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

*Genuine part "air cowl panel (N244-56-35X)" is required for models without factory strut bar.
原無配備拉桿車型須更換原廠的兩刷蓋板下方板件 (N244-56-35X)

Instructions 安裝說明

1. Remove the indicated boltsto take off the sound tube above the LH side strut tower.

拆下圖片標示的螺絲並卸下左側避震塔上方的引擎聲浪導管。

2. Remove the ECU bracket nuts and the LH side strut mount nuts to take off the factory strut tower bracket.

拆下固定ECU支架的螺帽及左避震器上座螺帽，將原廠的避震塔支架移除。

3. Install the new LH side tower bracket using factory nuts. (Torque: 49~59Nm). Then reinstall the ECU brackets using supplied M6 bolts and factory nuts. Then reinstall the sound tube.

使用原廠螺帽安裝新的左側避震塔支架 (上鎖扭力值49~59Nm)。完成後使用附件M6螺絲及原廠螺帽，將ECU支架鎖至新的支架，並將聲浪導管復原。

4. Same on the RH side, replace the side factory tower bracket with the new one (Torque: 49~59Nm). Then reinstall the beside bracket.

右側安裝方式與左側相同，使用原廠避震上座螺帽安裝新的避震塔支架取代原廠支架 (上鎖扭力值49~59Nm)，並將一旁的支架移至新的避震塔支架上。

5. Install the center bar to the brackets on both sides & cowl panel mounts using supplied M10 & M8 hardware.

使用M10 & M8 配件，將中間桿安裝至兩側支架及兩刷蓋板前的鎖點。

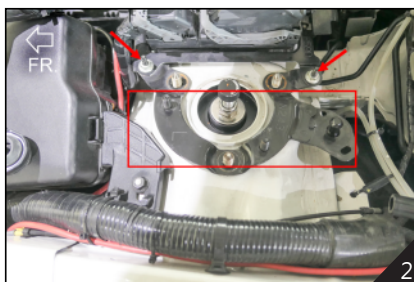
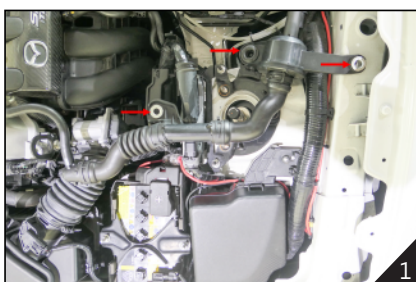


Illustration of installed state
安裝完成示意圖