

Installation Instructions

安裝說明書

FRONT SHOCK ABSORBER SKID PLATE

前減震筒護板

#Q0834

Application 適用車型

SUZUKI JIMNY JB64/JB74



Components 內含配件

- ① Skid Plate 護板 2pcs
- ② Bolt 螺絲 (M12x1.25x60)..... 2pcs
- ③ Bolt 螺絲 (M8x1.25x20)..... 2pcs
- ④ Nut 螺帽 (M12x1.25-17x11)..... 2pcs
- ⑤ Nut Plate 螺帽鎖片 (M8x1.25) 2pcs

Caution 注意事項


- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

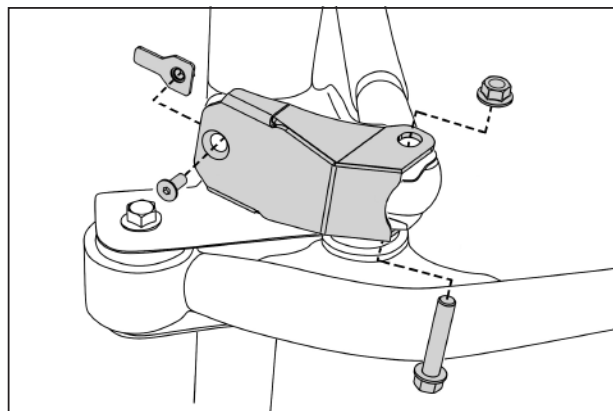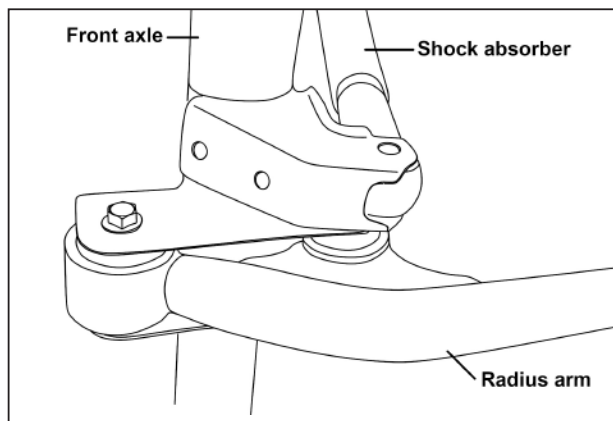

Note 提示

- ※ Recommended Torque Spec 螺絲上鎖扭力值:
 - M8 : 23Nm
 - M12 : 90Nm

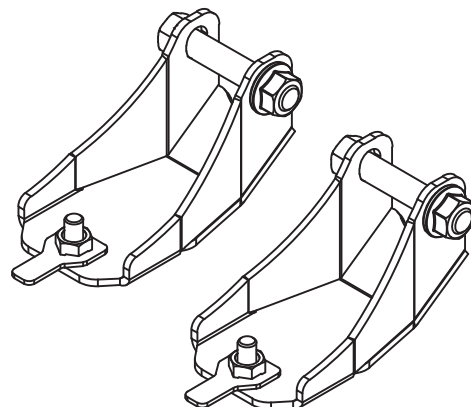

1. Raise the vehicle and support the front axle using a jack . 將車輛升起並使用千斤頂撐住前輪軸。
2. Remove one side of the factory shock absorber bolts and nuts. 將左右其中一側的原廠減震筒螺絲及螺帽拆下。
3. Place the skid plate onto the shock absorber mounting bracket. 將護板放置於減震筒固定座。
4. Install supplied M12 hardware to the shock absorber mount. 使用附件的M12螺絲及螺帽將護板鎖至減震筒鎖點。
5. Insert supplied M8 nut plate into the front side opening of shock absorber mounting bracket. Then install supplied M8 bolt to secure the skid plate. 將附件M8螺帽鎖片置入減震筒固定座的前端開口。並使用附件的M8螺絲對鎖將護板固定。
6. Repeat the procedure 2~5 for the other side. 重複步驟2~5安裝另一側的護板。



Illustration of installed state 安裝完成示意圖